LUBRICATION ORDER

LO 9-2320-218-12

14 NOVEMBER 1966 (Supersedes LO 9-2320-218-12, 18 Febuary 1966)

TRUCK, UTILITY: ¼-TON, 4×4, M151, M151A1 AND M151A1C
TRUCK, AMBULANCE: FRONTLINE, ¼-TON, 4×4, M718

Reference. TM 9-2320--218-10

Lubrication will be performed only as prescribed by this order except as required under unusual conditions as described in referenced TM.

Clean fittings before lubricating. Clean parts with THINNER, paint, volatile mineral spirits (TMP) or SOLVENT, dry cleaning (SD). Dry before lubricating. Lubricate dotted arrow points on both sides of the equipment.

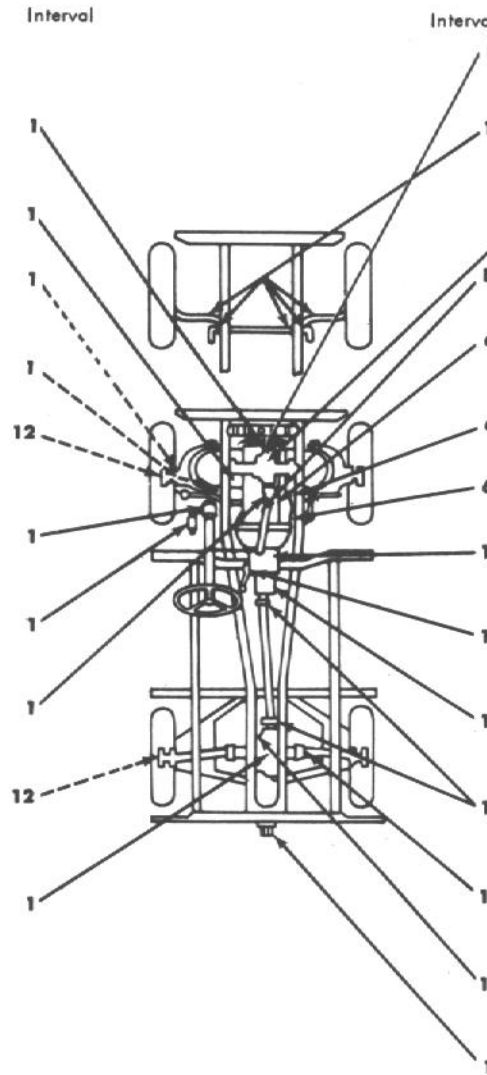

Lubricant		Interval	
Front Differential Fill and Level (Check level)	GO	1	
Air Cleaner (See note 1)	OE	1	
Front Axle Drive Universal Joint (3 fittings) (See note 11)	GAA	1	
Suspension Ball Joint (2 fittings) (See note 11)	GAA	1	
Front Wheel Bearings (Every 12,000 miles remove; clean, dry and repack)	GAA	12	
Steering Gear Fill and Level (Check level)	GO	1	
Brake Master Cylinder (Fill to 1-7/16 in. from top edge of filler hole)	HB	1	
Front Axle Propeller Shaft Universal Joint (1 fitting each end) (See note 11)	GAA	1	
Rear Wheel Bearings (Every 12,000 miles or annually, remove, clean, dry and repack)	GAA	12	
Rear Differential Fill and Level (Check level)	GO	1	

Interval	Lubricant	
12	GO	**Front Differential Drain** (Drain and refill. Cap. 2 pts. See note 5).
1	GAA	**Steering Linkage** (7 fittings) (See note 11)
	OE	**Crankcase Fill**
D		**Crankcase Level** (Check Level)
6	OE	**Crankcase Drain** (Drain and refill. Cap. 5 qts. See note 2)
6		**Engine Oil Filter** (See note 3)
6		**Distributor** (See note 4)
12	GO	**Transmission Drain** (Drain and refill. Cap. 5½ pts. See note 5)
1	GO	**Transmission** (Fill and Level. Check level.)
12	GO	**Transfer Drain** (Drain at time of transmission drain.)
1	GAA	**Rear Propeller Shaft Universal Joint** (1 fitting each end)
1	GAA	**Rear Axle Drive Universal Joint** (3 fittings each shaft)
12.	GO	**Rear Differential Drain** (Drain and refill. Cap. 2 pts. See note 5)
1	GAA	**Pintle** (2 fittings)